## INSTALLATION

## Super Loom (2 Headlight)



## **Installation Instructions**

- 1. Un-plug headlight plugs from the original wiring loom. Run Super loom wire behind grill.
- 2. Plug the SUPER LOOM on to both headlights with the 3 pin white female plugs provided.
- 3. The black earth wires from these plugs should be properly earthed to the body work.


Note: You need to scratch the painted surface back to bare metal to provide a good contact.

- 4. Plug the 3 pin male into the original 3 pin female plug previously used on the back of headlight.
- 5. Mount the relay assembly to the inner front guard.
- 6. The separate lamp fitting supplied is a circuit completer, this plugs into the outer standard headlight socket on the opposite side to the Super loom switching wires.
- 7. Run the 6mm red wire (this is the one with the fuses attached) directly to the 12 Volt positive side of the main battery.
- 8. Check all connections then try out your new SUPER LOOM bright lights.
- 9. If the Hi beam indicator on the dash is very dull or does not work at all when Hi beam is on OR if the lights run in duplication (that is Hi and Lo beam on together) you will need a circuit completer. This plugs into the original wiring loom female head light plug on the opposite side to the SUPERLOOM relay. (If you do not have a circuit completer in your kit, ask for one from your nearest SUPERLOOM agent. (Most Toyota Vehicles)

Note: If Driving Lights are fitted they must be rewired to green wire or damage and/or failure will result.

## 2 HEADLIGHT SUPER LOOM

If you have driving lights fitted, the pick up wire for the driving lights must be moved to the thin green wire positioned out the bottom of the Super Loom assembly

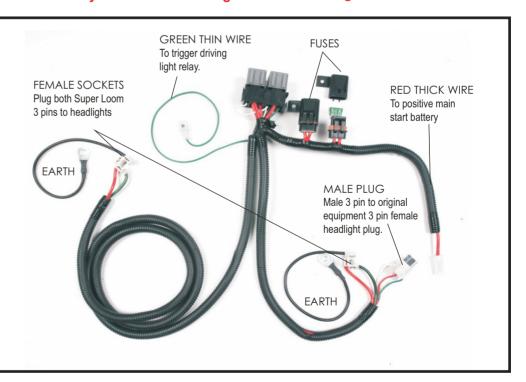





**Piranha Off Road Products** Factory 4, 383 Dorset Road Boronia VIC 3155

Fh: (03) 9762 1200 Fx: (03) 9762 1400 www.piranhaoffroad.com.au

