

shoreline 4x4
4WD ACCESSORIES

Shoreline 4x4 Extreme Series Bullbar X-1



Fitting instructions for Nissan Navara NP300

Front TOW points only - Rated to 3.75T - NOT FOR SNATCHING

www.slx4x4.com.au

(08) 9444 2946

126 Hector St W - OSBOURNE PARK W.A. 6017

shoreline 4 X 4

4WD ACCESSORIES

1. Congratulations on purchasing your very own Shoreline 4x4 Extreme Series Bullbar. To start, clear an area around the front of your car and unwrap the bar.




2. With the bar unwrapped, you're ready to remove the grill. There are four clips on the top of the grill.



3. Then carefully remove the two twist lock clips either side of the grill as shown.



4. Pull the grill away, pushing the clips where it attaches to the bumper.

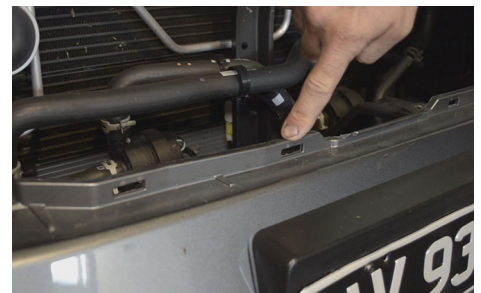

www.slx4x4.com.au


(08) 9444 2946

126 Hector St W - OSBOURNE PARK W.A. 6017

shoreline 4 X 4

4WD ACCESSORIES

5. Unscrew the top of the bumper.

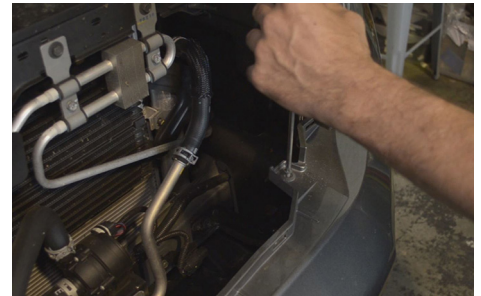

6. Undo the bolts holding the lower part of the bumper as shown.



7. Remove the clips holding the inner wheel liner to the bumper.



8. Pull away the wheel liner to unbolt the bumper from the front quarter panels.



www.slx4x4.com.au

(08) 9444 2946

126 Hector St W - OSBOURNE PARK W.A. 6017

shoreline 4 X 4

4WD ACCESSORIES

9. Carefully pop the bumper away from the wheel arches and you should be able to pull the whole bumper off now, taking care to disconnect the fog light wiring.



10. Remove the plastic mouldings underneath the headlights.



11. Unbolt and remove the front impact bar.



12. Unbolt and remove the lower air dams.



www.slx4x4.com.au

(08) 9444 2946

126 Hector St W - OSBOURNE PARK W.A. 6017

shoreline 4 X 4

4WD ACCESSORIES


13. There are some hard to find clips that can be popped off with a flat head to remove the rest of the lower air dam.




14. Now separate the bar from the bracket.



15. Remove the two curved metal brackets, these will foul on the bar bracket if not removed.

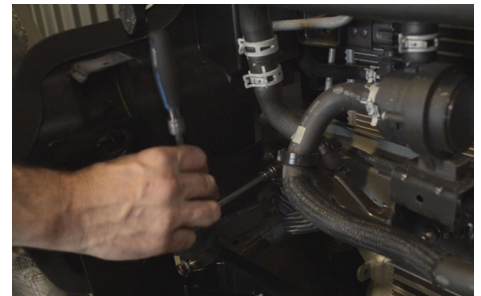

16. Mark and trim the factory air dams as shown.

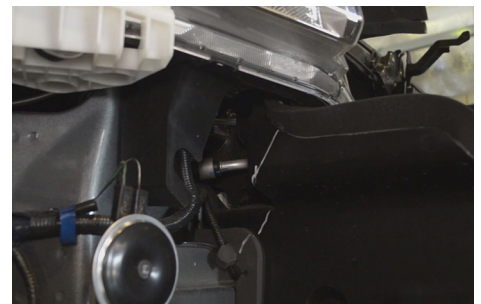

www.slx4x4.com.au

(08) 9444 2946

126 Hector St W - OSBOURNE PARK W.A. 6017

shoreline 4 X 4

4WD ACCESSORIES


17. Fit and bolt up the bar using the factory bolts.



18. Make up the support bracket and fit to the chassis as shown. See the second photo to ensure that the support brackets are fitted correctly.



19. *Chassis support bracket.

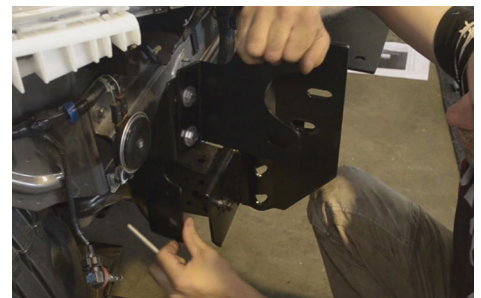

20. Trim and secure the inner wheel liner.



www.slx4x4.com.au

(08) 9444 2946

126 Hector St W - OSBOURNE PARK W.A. 6017

shoreline 4 X 4

4WD ACCESSORIES

21. Carefully mount the Extreme Series bar, it is best to get someone to help you.



22. Solder the fog lights to the factory wiring and test.



23. Fit the bash plate with the supplied hardware and you're ready to hit the dirt!



www.slx4x4.com.au

(08) 9444 2946

126 Hector St W - OSBOURNE PARK W.A. 6017