



# PATROLAPART Y62 PATROL AIR BOX SAVER BRACKET KIT INSTRUCTIONS


**SKU: PAP-0120-KIT**



Remove airbox by undoing the 3 bolts and the intake pipe hose clamp, unclip the breather hose, unplug MAF and carefully unpick the 4 cable ties holding MAF loom (use sharp scribe or screwdriver)



Remove the lid from the base if you haven't already and hold the Bracket up against the Air Box Base as pictured and mark out the 3 holes with a texta or similar. Make sure you hold the bracket right up against the top when marking out the holes, so the bracket sits against the shoulder. (arrow pointing up)

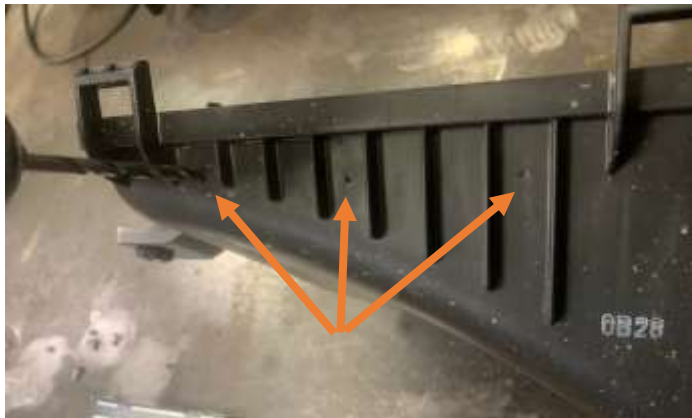

Drill the 3 holes to 5.5MM. We find it easiest to use a pilot drill first to get the holes perfectly in the middle of your marks. Somewhere in the 2.5-3.5mm range works well.



Deburr the 3 drilled holes by using a bigger drill. 10mm or thereabouts and just twist it by hand (it is only plastic after all) to take the burrs completely off, inside and out.



Fit the bracket as pictured, with the washers and nuts on the inside ensuring the bracket is pushed hard up against the shoulder as above.



Test fit filter and lid, then reinstall airbox into vehicle. Easiest to do the base first, with the cable ties, then do the lid after. If you have any issues call us on (03) 9735 9099 or email [sales@patrolapart.com.au](mailto:sales@patrolapart.com.au)