




Fitting Instructions for Patrolapart Y62 Centre Console Lid Extension SKU: Y62RCCA & PAP-1010

Watch our fitment video on YouTube! <https://youtu.be/PpMMbX1yClk>


1. Remove the rear panel of the centre console using either a trim removal tool or a flat blade screw driver. It's easiest to do this by opening the console lid from the front and gently prying open the join of the back trim in between the two hinge brackets. The rear panel can then just be pulled off the console.
2. Remove the 3 screws (as circled) on the rear panel that attach the bottom of the lid to the centre console.
3. Remove the top console trim by prying open one of the corners and then popping out the rest with your removal tool/screw driver.




4. Remove the 4 screws that hold the lid to the console so that the lid can be removed.
5. Remove the 2 screws that hold the plastic trim onto the bottom of the lid, keeping the screws aside to use again for reassembly.

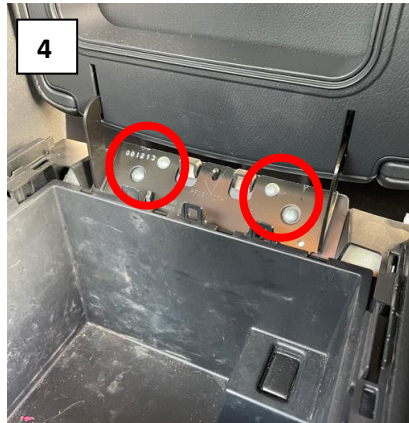

6. Gently remove the plastic trim being mindful of the clips holding it together.
7. Remove all of the screws that are holding the silver trim and brackets to the lid, **keeping the screws aside and taking note of where you removed them from so they can be used again for reassembly.** Once all the screws are removed be mindful of the rear hinge (on the right under the tab) when removing the silver plate – hold the rear hinge down to stop it from springing up so you can remove the silver plate easily.

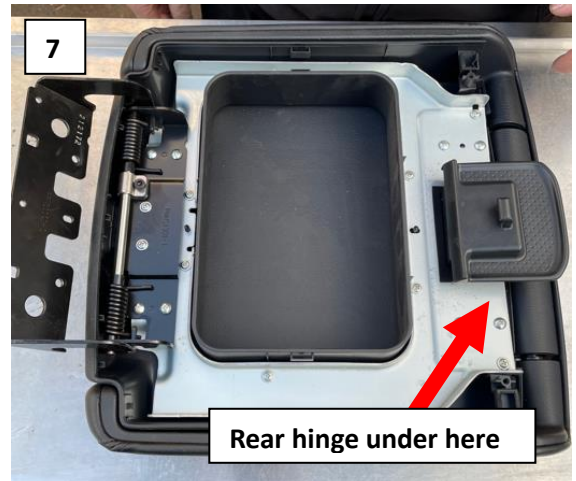

8. The plastic insert beneath the silver plate should just pop out and can be put to the side.
9. Remove the remaining screws on the base of the leather lid and gently pull apart the plastic trim, being mindful of the clips around the edges. This can then be put aside for reassembly.
10. Remove the screws on the rear hinge to finish disassembling the lid of the console.

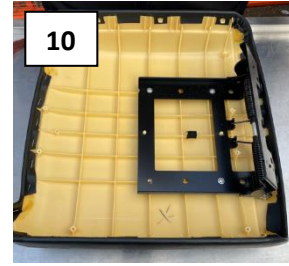

11. Using the original leather lid from the console of the vehicle, grab the first new piece from the kit and that should drop straight into where the factory plastic piece was, reusing the screws from the original piece.
12. The kit comes with a third hinge to allow the top part of the lid to open, this gets screwed into place at the back of the new plastic trim using the locator pin and the new screws provided in the kit.
13. Once the hinge is attached, place the plastic trim over the hinge and use the original screws to put it in place.



14. Attach the centre section of the console to the new lid by sliding the hinge onto the rear of the centre section piece, lining up the 4 screw holes and using the new screws provided in the kit.
15. The original forward flipping hinge attaches into the front of this new section, it has a locating pin to help set it in place, lining up with the screw holes, reusing the original screws.
16. Using the original console lid insert it will slide onto this forward flipping hinge and clip into place, then use the screws provided in the kit for reassembly.



17. To reattach the trim piece that sits on the inner side of the console lid you need to place the silver bracket on the final trim piece and slide it onto the front hinge at the same time, this can then be screwed into place using the original screws for reassembly.
18. The rear hinge just drops straight back into place, reusing the original screws.



19. The inner plastic trim piece slides back on top of the silver bracket, with the two clips aligned at the handle. This completes the build of the lid itself.



20. Place the completed lid back into the centre of the vehicle, first screwing it in from the front using the 4 original screws.
21. Place the finishing plastic trim piece back into place, evenly clipping it in around the edges, being mindful of the clips.
22. Reassemble the back of the console using the 3 original screws and place the back panel into place.

