




FITTING INSTRUCTIONS
FOR PATROLAPART Y62
COMPRESSOR TANK UNDERFLOOR
KIT

SKU: PAP-1241

1. Mount the air tank clamps onto the air tank loosely. (Leave the tank off the mounting bracket for now)
2. Set the air tank up with the drain at the bottom, and approx. 200mm from the back end of the tank to the first bracket as illustrated. (Illustration shows tank, and bracket as fitted to the car. Tank On Top, Large Flange of mounting bracket to back of car, Pointing up)

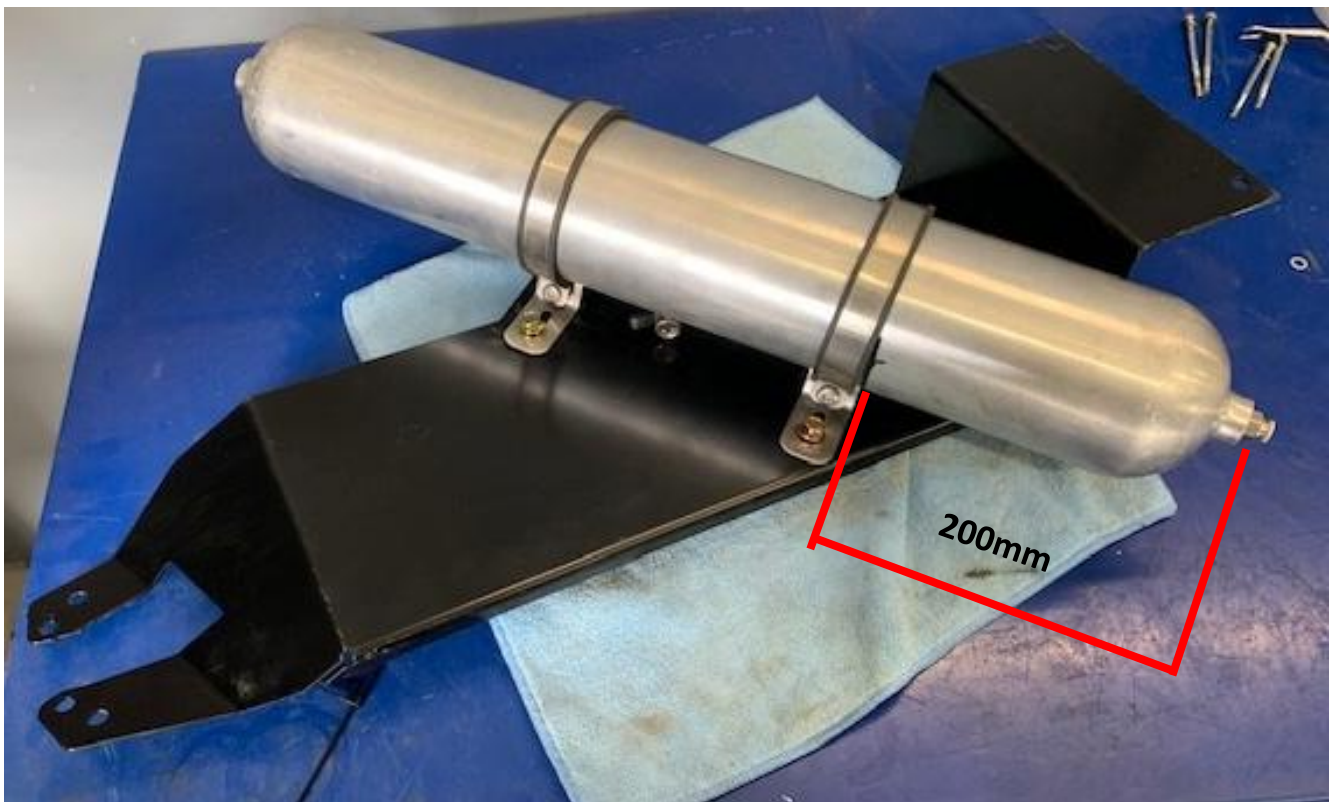

3. Fit a straight Air line push fitting into the back port of the tank using sealant on thread, and tighten.
4. Fit the Plug supplied into the front port of the tank using sealant on thread, and tighten.
5. Undo the tail shaft from the diff end and let the tail shaft drop down and out of the way.
6. Undo the 2 nuts where the handbrake cables fit to the studs on the floor brace and slip the handbrake cables out of the way.
7. Above the chassis crossmember over the diff you will see 2 bolts into the body of the car- Remove these and retain, these hold the mounting bracket.
8. Slide the air tank, with clamps up above the secondary fuel tank on approximately 45 degree angle, with the air line push fitting facing the passengers rear wheel.
9. Slide the mounting bracket up into place- and start the 2 bolts at the back, do not tighten just yet.
10. Push the Mounting bracket up over the Handbrake Cable mounting studs, then slide the handbrake cables back into place and tighten all 4 bolts/nuts.

11. Align the air tank mounting clamps up with the 4 holes in the mounting bracket, and secure with the supplied M8x20 Flanged Bolts and Nyloc Nuts. Then tighten the 2 clamping bolts also. This stage can be fiddly.
12. Before going any further, ensure tank has clearance to floor, and fuel tank, and not rubbing on anything.
13. Connect your air hose to the push fitting, or braided line, whatever your preferred method.
14. Refit the Tail shaft.
15. Check handbrake applies correctly as per before removal of mounts.

