

HEADLAMP PROTECTOR








D27 NAVARA (07/2025~) Parts No. B6300-8AM0AAU

FITTING INSTRUCTIONS

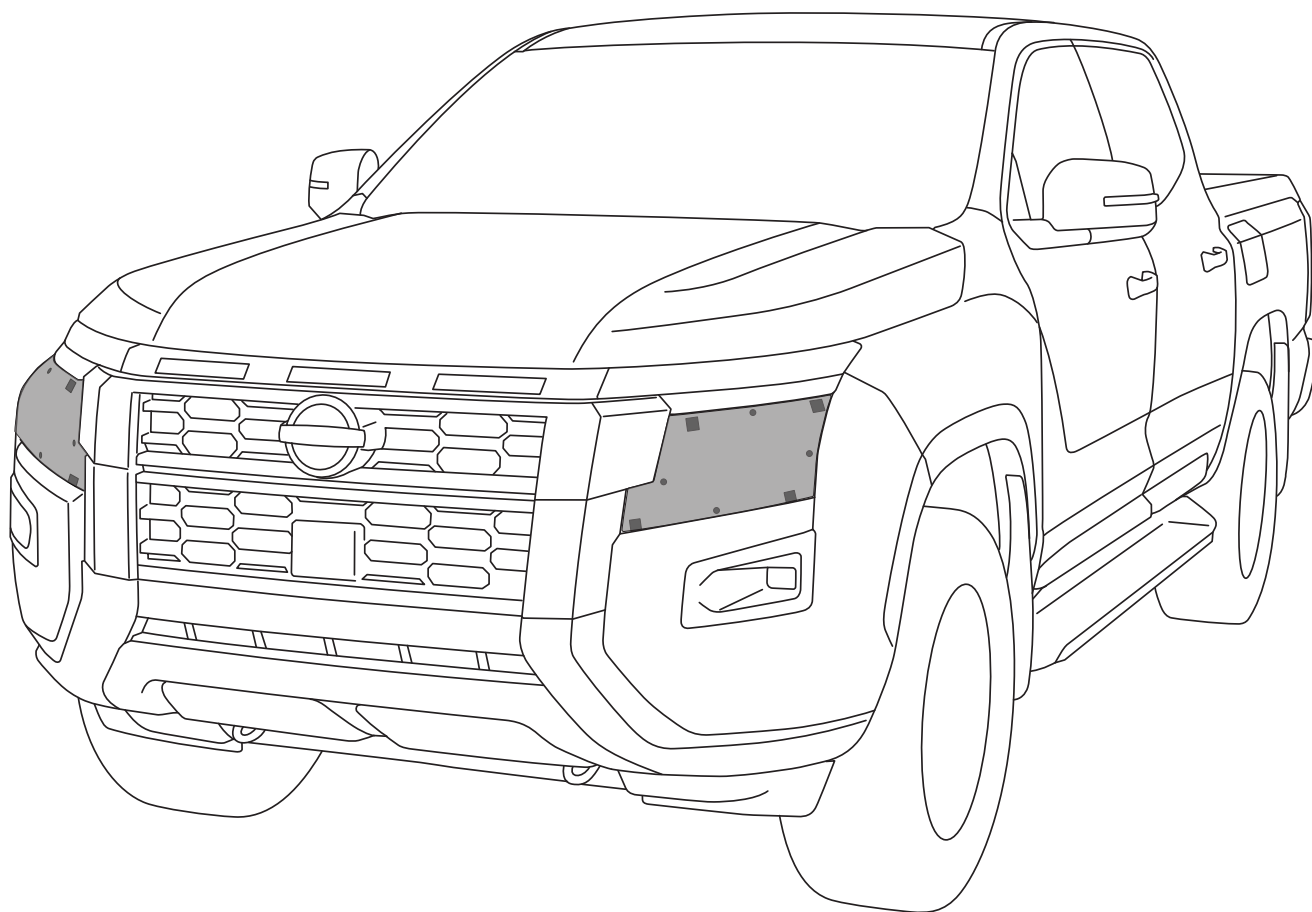

Read instructions carefully before commencing this activity.

Kit Contents

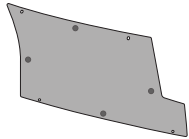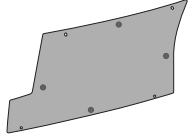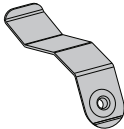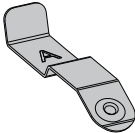No.	Item Description	Quantity	Image
1	Headlamp Protector RHS	1	
2	Headlamp Protector LHS	1	
3	Top Inner Clip	2	
4	Top Outer Clip "A"	2	
5	Bottom Inner Clip "I"	2	
6	Bottom Outer Clip "O"	2	
7	Screw	8	
8	Washer	8	
9	Abrasive Resistant Tape	8	
10	Alcohol Wipe	1	

Tools Required

• Non-Permanent Marker/Pencil	• Clean Dry Cloth	• #2 Phillips Head Screwdriver	• Trim Removal Tool
-------------------------------	-------------------	--------------------------------	---------------------

General Notes

- Read through the complete Fitting Instructions before installation of accessory.
- Always install the accessory following the Fitting Instructions. Failure to do so may cause damage to the vehicle or the accessory.
- Ensure all recyclable discarded vehicle/accessory components and packaging are recycled following local regulations.
- It is always recommended that this accessory is fitted by a qualified Nissan Technician.
- Safely store and protect any removed vehicle components.
- Remove all metal swarf and dust from all vehicle surfaces if surface is used for vehicle part or accessory installation.
- Ensure all fasteners are torqued to the specifications as per Fitting Instructions/Service Manual if applicable.
- Ensure all vehicle settings (radio stations etc.) are recorded and re-set after disconnection of battery power.

Safety Notes


- Check that all work practices comply with safety standards.
- Appropriate clothing and PPE must be worn.
- While using power tools or safety equipment, ensure safe procedures are followed.

Maintenance

- Clean with warm water and soft cloth.
- Vehicles with headlamp protector must not be washed in automatic car wash machines.


Step 1

- Clean and dry the headlamps and surrounding areas.

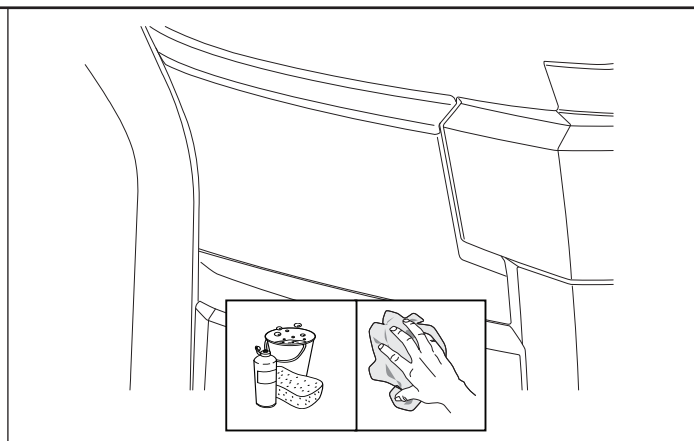


Step 2

- Trial fit the Headlamp Protector RHS (1).
- Note the two slots at the top of the Headlamp Protector RHS (1).
- Note the two holes at the bottom of the Headlamp Protector RHS (1).

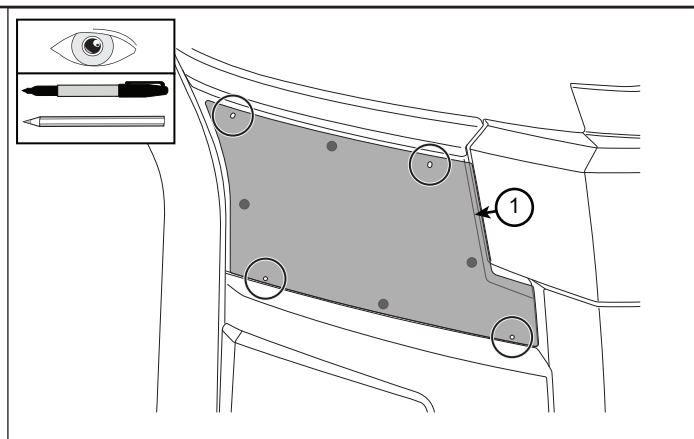

Step 3

- At the previously noted and marked locations, clean the headlamp with the Alcohol Wipe (10) provided. Remove any residue with a clean, dry cloth.
- Adhere four Abrasive Resistant Tapes (9) to the two slot and two holes locations.

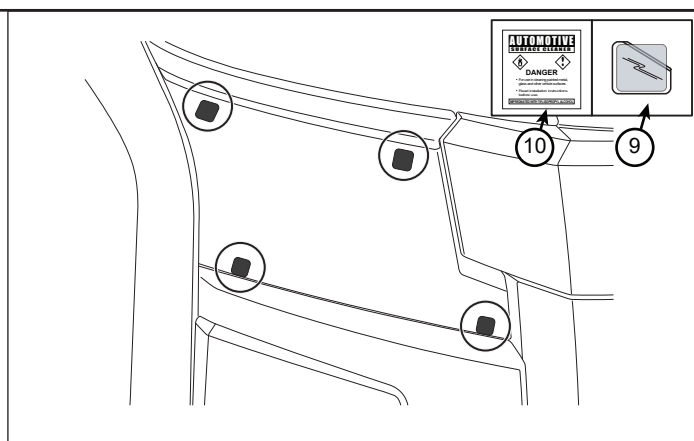


Step 4

- At the previously noted and marked top inner slot position, slide the trim removal tool under the bumper and fit the Top Inner Clip (3) as shown.



Important Ensure that the clip is positioned over abrasive resistant tape. Failure to do this may result in permanent scratch damage to the vehicle.

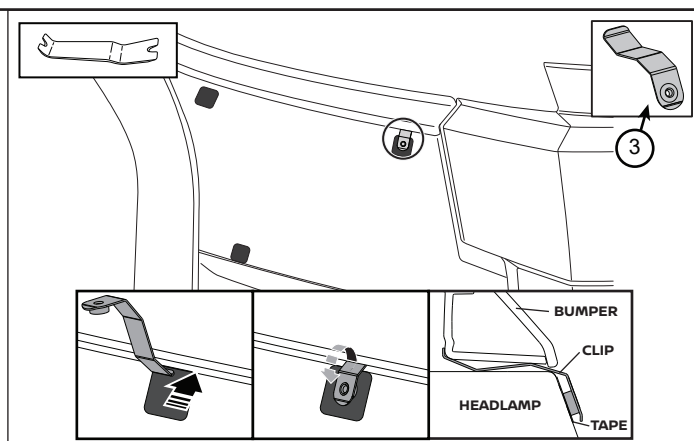


Step 5

- At the previously noted and marked top outer slot position, slide the trim removal tool under the bumper, insert Top Outer Clip "A" (4) at an angle and then rotate the clip into place. Confirm that the clip is hooked behind the bumper.

Important



Ensure that the clip is positioned over abrasive resistant tape. Failure to do this may result in permanent scratch damage to the vehicle.

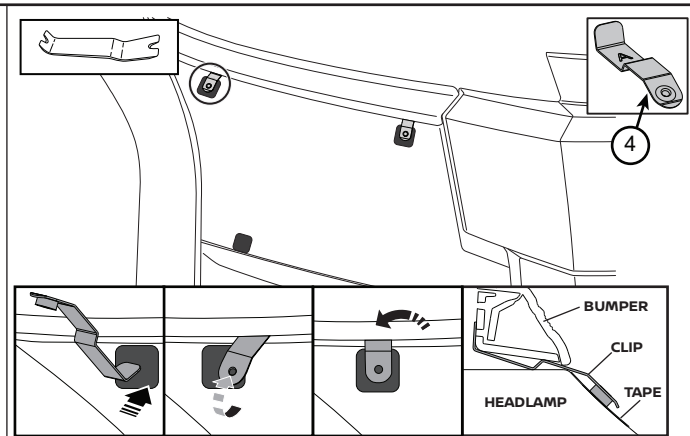


Step 6

- At the previously noted and marked bottom hole position, fit the Bottom Inner Clip "I" (5) as shown.

Important



Ensure that the clip is positioned over abrasive resistant tape. Failure to do this may result in permanent scratch damage to the vehicle.

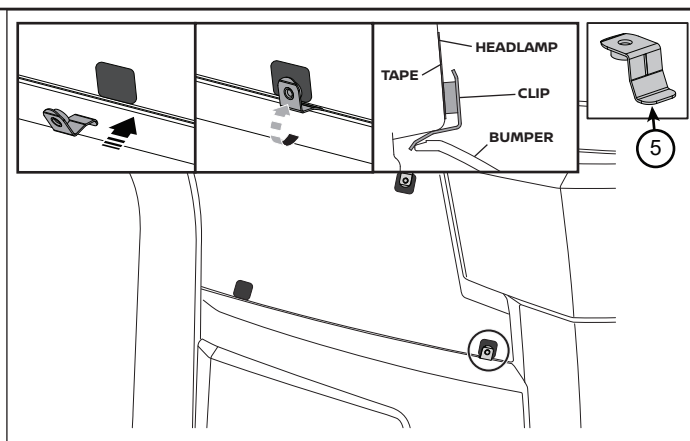


Step 7

- At the previously noted and marked bottom hole position, fit the Bottom Outer Clip "O" (6) as shown.

Important




Ensure that the clip is positioned over abrasive resistant tape. Failure to do this may result in permanent scratch damage to the vehicle.

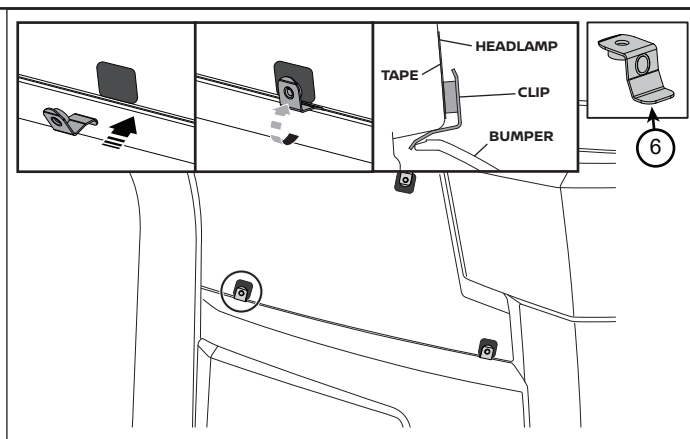


Step 8

- Secure the Headlamp Protector RHS (1) to the Bottom Inner Clip "I" and Bottom Outer Clip "O" with the Screws (7) and Washers (8) provided.

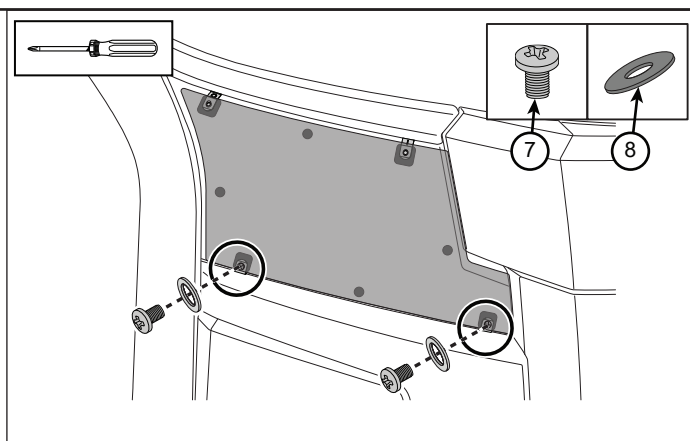


Step 9

- Secure the Headlamp Protector RHS (1) to the Top Inner Clip (3) and Top Outer Clip "A" (4) with the Screws (7) and Washers (8) provided, while applying upward pressure to the Headlamp Protector RHS (1).

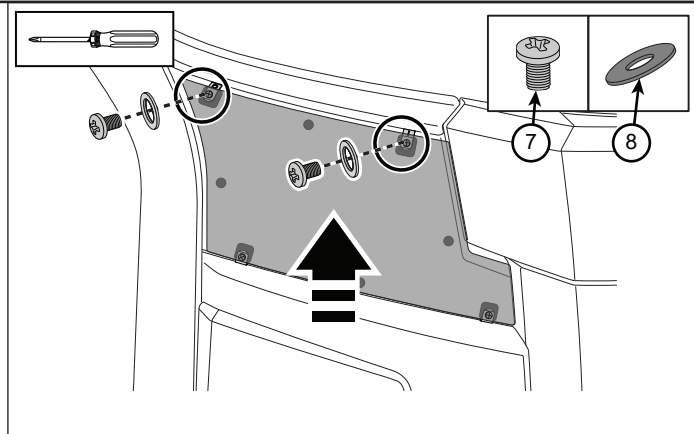

Step 10

- Ensure the Top Inner Clip (3) and Top Outer Clip "A" (4) are as close to the bottom of the Headlamp Protector RHS (1) slots as possible.
- To remove, reverse the above procedures.

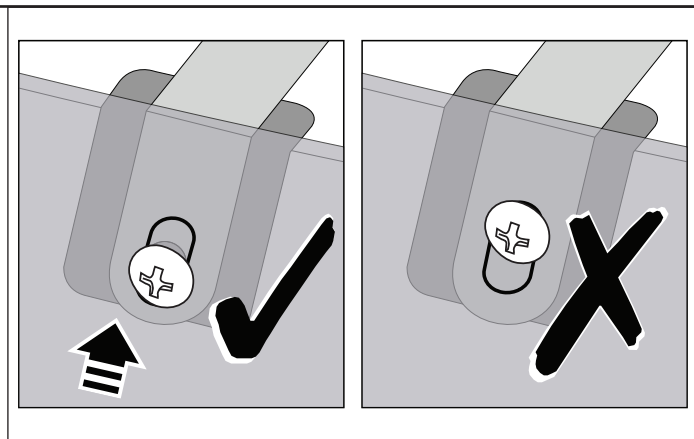

Final Check after Installation

☐	Verify installed parts fit correctly.
☐	Verify all Clips are fully engaged and locked.
☐	Verify installed parts are free from cracks and scratches.
☐	Verify vehicle is undamaged.
☐	Place fitting instructions in the glove box.
☐	Do not wash vehicle for 24 hours.

Total No. of Items included in Kit			33
NAVARA - B6300-8AM0AAU - SERVICE KITS 1 2 3 4 5 6 7 8	1 Top Inner Clip 2 Top Outer Clip "A" 3 Bottom Inner Clip "I" 4 Bottom Outer Clip "O" 5 Screw 6 Washer 7 Abrasion Resistant Tape 8 Alcohol Wipe		
NISSAN	Service Kit Part No.		B6309-8AM0AAU
	ITEM	SERVICE KIT	Fitting Kit